

راهنمای بروز رسانی فریمور مودم روتر مدل NWR – M920





مقدمه

در این راهنما، نحوه بروزرسانی فریمور (Firmware) مودم روتر نتربیت مدل NWR-M920 به صورت گامبه گام توضیح داده شده است. با دنبال کردن این مراحل، میتوانید فریمور (Firmware) مودم خود را به آخرین نسخه بروز رسانی کنید و از بهبودهای جدید بهرهمند شوید.

پیشنیازها

- ۱) اتصال به اینترنت پایدار : برای بارگیری (Download) فریمور (Firmware) جدید و جلوگیری از قطع ارتباط در زمان بروز رسانی.
 - ۲) کامپیوتر متصل به مودم : برای انجام مراحل از طریق پنل مدیریت مودم.
 - ۳) دسترسی به صفحه تنظیمات مودم: نام کاربری و رمز عبور تنظیمات مودم را داشته باشید.
- ۴) پشتیبانگیری (Back up) اطلاعات مودم (اختیاری) : بهتر است پیش از بروز رسانی (Update) ، تنظیمات مودم خود را پشتیبان گیری کنید.



مرحله اول : بارگیری (Download) آخرین نسخه فریمور (Firmware)

9:00 لغايت 16:00/ جهارشنبه از ساعت 9:00 لغايت 15:00/ يتچشنبه از ساعت 9:00 لغايت	
	به اطلاع میرساند. ساعت کاری پذیرش مشتریان دفتر مرکزی تهران تا پایان سال 1403 به این شرح می،باشد: شنبه تا سه شنبه از ساعت
De solar Er	A آونگ ۵ مستمو-
همکاری یا ما 🖻 پورتال نمایندگان	و، محمولات ا بلاگ خدمات پس از قروش نوبت دهی آکاین ادانود ادرباره ما سوالات منداول اتماس با ما
	EG دریچه ای به وسعت که کشان دانیتور های سری فوق عریض دانیتور های سری فوق عریض
های و شبکه	آونگ، برترین گارانتی محصولات رایان

🖌 مرورگر خود را باز کنید و به وبسایت رسمی شرکت آونگ (<u>avang.ir)</u> وارد شوید.

- 🖌 در صفحه اصلی وب سایت، برروی آخرین آپدیتها (فریمور، درایور، بایوس) را پیدا کرده و روی آن کلیک کنید.
 - در این بخش، آخرین نسخه فریمورهای برند "**نتربیت و دیلینک"** موجود می باشد.





پیدا کردن مدل مودم و بارگیری (Download) فایل فریمور (Firmware)

- پس از ورود به بخش بارگیری آخرین فریمورها، با پیمایش کردن (اسکرول کردن) صفحه به سمت پایین، مدل مودم
 مورد نظر خود را پیدا کنید.
- Firmware) مطابق تصویر زیر، میتوانید با کلیک روی گزینه " دانلود فریمور محصول M920 " فایل فریمور (Firmware)
 مودم خود را دریافت کنید.

-

مرحله دوم: ورود به تنظيمات مودم

- مرورگر وب خود را باز کرده و آدرس IP مودم (۱۹۲.۱۶۸.۰.۱) را در نوار آدرس وارد کنید.
- ۲. نام کاربری و رمز عبور را وارد کنید (به طور پیشفرض "admin/admin" است، مگر اینکه تغییر داده باشید).

192.168.0.1 login.htm	Critis Model Name: NWR-J4920 Hardware Version: A1 Firmware Version: IR 12	
ner	CONTRACTOR NAME: CONTRACTOR DE	
	Cogrigat © 2023 Neletat, Al Rights Resoned.	



مرحله سوم: شروع فرآيند بروز رساني (Update)

۰. پس از ورود به پنل مدیریت مودم، روی سربرگ " Management " کلیک کنید.

Neterbit. HWA1 EWIR_12	Home	Wizard	Settings		र्ट्रे Management	Cont Logout
The setup wizard will guide you to	o configure Router for first t	Setup Wiz ime. Please follow	ard w the setup wizard	I step by step.		
Welcome to Setup Wizard						
The Wizard will guide you the thr	ough following steps. Begin	by clicking on Ne	ext.			
		Norma				
		Next>>				

۲. پس از ورود به بخش "Management" روی گزینه " Upgrade " کلیک کنید.

		Home	Wizard	Settings	Eestures	Management	(Second
	Ē	Ģ		(1)	(C)		
Time Sys	stem Log	System Settings	Statistics	Diagnostics	TR069	SNMP	Upgrade
his page allows you un nay crash the system.	pgrade the	Router firmware to r	new version. Plea	ase note, do not po	wer off the device	e during the upload	because it
			Firmware	Upgrade			
		Fir	mware Version: I	R_12			
			Release Date:	Thu Jul 6 02:20:48 L	TC 2023		
			Select File:	Select File)		
			Uplo	ad			



۳. روی گزینه " Select File " کلیک کنید و فایل فریموری (Firmware) را که بارگیری (Download) کردهاید، را انتخاب کنید.

neterbit		ជ	57	2	88	尊	Ś	
HW:A1 FW:IR_12		Home	Wizar	d Settings	Features	Management	Logout	
E) Time	C System Log	System Settings	Statistics	Diagnostics	TR069	SNMP	(O) Upgrade	
This page allows y may crash the sys	rou upgrade the tem.	Router firmware to	iew version. Ple	ease note, do not po	wer off the device	during the upload	l because it	
			Firmware	Upgrade				
		Fi	mware Version:	IR_12				
			Release Date:	Thu Jul 6 02:20:48 U	TC 2023			
			Select File	Select File				
			Upl	oad		l		
		Сору	ight © 2023 Neter	bit. All Rights Reserved.				

Neterbit.	ne Wizard Settings	Features Managemen	nt Logout
Open			×
$\overline{\text{Time}} \leftrightarrow \rightarrow \checkmark \uparrow \underline{\checkmark} \circ c$	ownloads v C	Search Downloads	م ade
This page all may crash the Organize Vew folder		≣ • 🔳	() use it
> 🔷 OneDrive	lame	Date modified	Туре
Desktop *	t month NWR-M920-20230706-IR12.bin	10/29/2024 1:11 PM	BIN F
🕑 Music 🖈			
NWR-M920			
File name: N	/R-M920-20230706-IR12.bin	All Files Open Cancel	×



۴. سپس روی گزینه "Upload " کلیک کنید تا فرآیند بروز رسانی آغاز شود.

توجه : هنگام آپدیت به هیچ عنوان مودم را خاموش نکنید و اینترنت را قطع نکنید. این فرآیند ممکن است چند دقیقه به طول انجامد.

🖌 پس از اتمام فرآیند بروزرسانی، مودم به صورت خودکار راه اندازی مجدد (Reset) می شود.

			(j)	Mizard	Sattings	Feature	Management	(S)	
	Time	Bystem Log S	ystem Settings	Statistics	Diagnostics	TR069	SNMP U	() lpgrade	
	This page allows you may crash the syste	u upgrade the Re m.	outer firmware to ne	ew version. Pleas	e note, do not po	wer off the device	e during the upload I	ecause it	
				Firmware U	pgrade				
			Firm	ware Version: IR Release Date: Th	_12 iu Jul 6 02:20:48 L	ITC 2023			
				Select File:	NWR-M920-202 IR12.bin	30706-			
				Upload					
			Copyrig	ght © 2023 Neterbit. J	All Rights Reserved.				
.1/main.html									
1/main.html	Neterbit HWATEWIR_11	2	Home	L Wizard	Settings	Features	Management	Cogout	
.1/main.html	Netericit. HWA1FWIR_1: E Time	2 System Log	Home System Settings	Vizard Statistics	Settings Diagnostics	Features TR069	Management E SNMP	Cogout Cogout Jpgrade	
1/main.html	Netericit. HWA1FWJR_11 E Time	2 System Log	Home System Settings	History Wizard Mizard Statistics	Settings Diagnostics	Features Features TROB9	Management	Logout (9) Jpgrade	
1/main.html	Neterbit. Hwat Fwire 1: E Time	2 System Log	Home System Settings	Wizard Wizard Statistics Start Upgrade off or reboot the Please w	Settings Settings Diagnostics P Firmware 9 Device during to ait	Features Features TROB9 This time.	Management	Logout O pgrade	
1/main.html	Neterbit. HWAT FWIR_11 IIII Time	2 System Log	System Settings	Wizard Wizard Statistics Start Upgrade off or reboot the Please w	Settings Diagnostics P Firmware P Device during to vait	Features Features TROB9 this time.	Management EE SIMP	Logout O pgrade	
.1/main.html	Netercit. HWAI FWIR_1: Time	2 System Log	System Settings	Wizard Wizard Statistics Start Upgrade off or reboot the Please w	Settings Diagnostics PFirmware • Device during tr vait	Features Features TRO69	Management CO SNMP	Logout ©	
l.1/main.html	Neterbit. HWAT FWJR_12 E Time	2 System Log	System Settings	Vitzard Vitzard Statistics Start Upgrade off or reboot the Please w	Settings Diagnostics Pirmware Povice during t rait	Features Features TRO69 This time.	Management CO SNMP	Cogout Cogout Jograde	
1.1/main.html	Time	2 System Log	For turn	Wizard Wizard Statistics Statistics Statistics COPYRIGHT & ALF	Settings Diagnostics Pirmware 2 Device during tr vait	Features Features TRO69 this time.	Management CO SNMP	Logout o lograde	



مرحله چهارم: راهاندازی مجدد (Reset Factory) مودم

توجه : پس از اتمام برروز رسانی، لطفا دکمه ریست دستگاه را به مدت ۳۰ ثانیه به صورت سخت افزاری نگهدارید تا مودم به تنظیمات کارخانه باز گردد و بروزرسانی (Update) به خوبی روی دستگاه اعمال گردد.



در صورت نیاز به راهنمایی بیشتر، می توانید با تیم پشتیبانی از طریق شماره ۱۶۶۵ تماس بگیرید.